


# AHR-101S

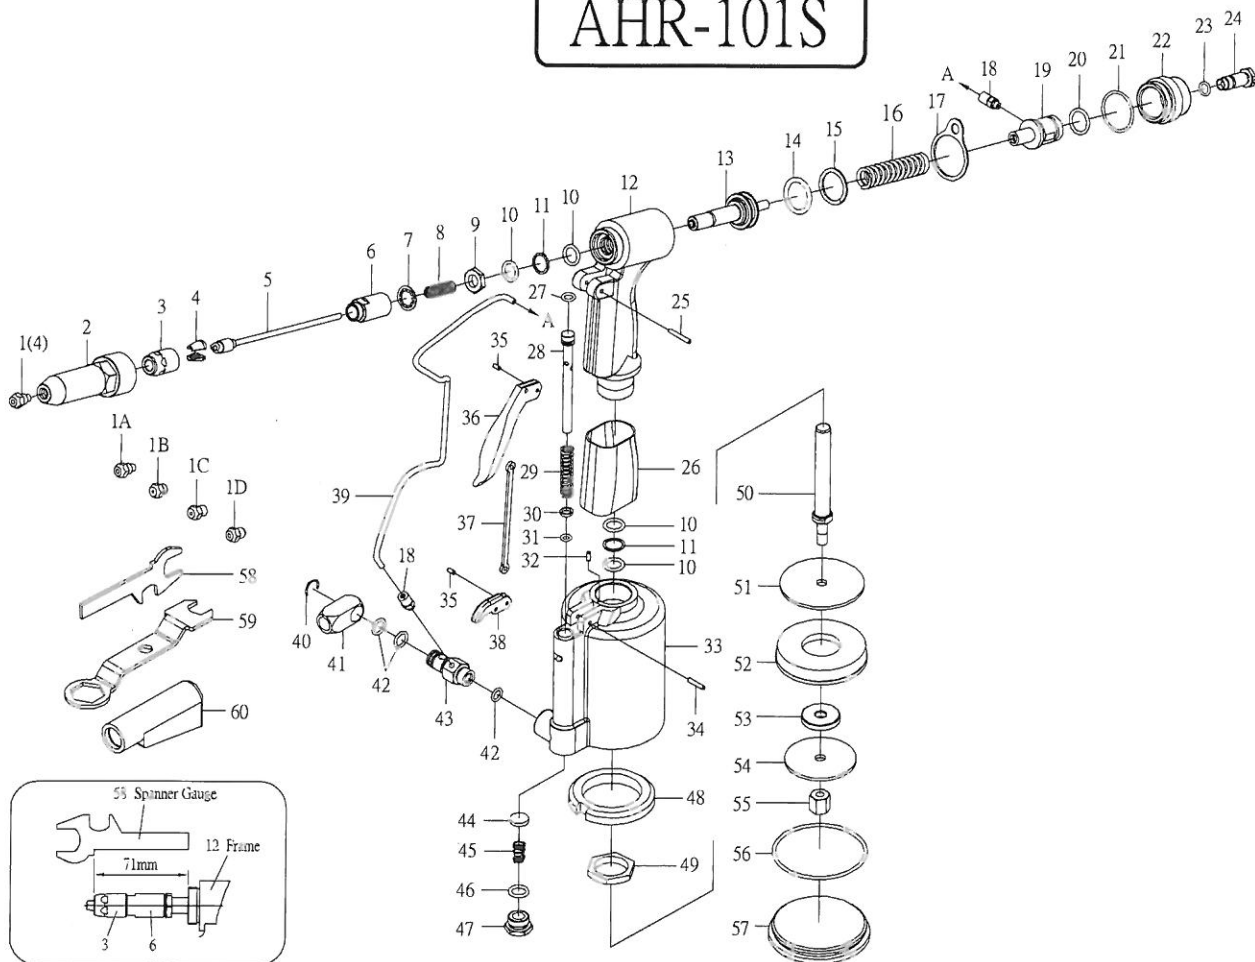

Index	Part No.		Qty.	Index	Part No.		Qty.
1		Nospieces		29	AHR-101-44A	Spring, Valve	1
1A	AHR-101-1A	Nospieces, 3/16" <i>5.8</i>	1	30	AHR-101-45A	Collar, Valve	1
1B	AHR-101-1B	Nospieces, 5/32" <i>4</i>	1	31	P6	O Ring	1
1C	AHR-101-1C	Nospieces, 1/8" <i>3.2</i>	1	32	ψ2 × 8L	Spring Pin	1
1D	AHR-101-1D	Nospieces, 3/32" <i>2.4</i>	1	33	AHR-101-29	Cylinder	1
2	AHR-101-11	Frame Head	1	34	ψ3 × 16L	Spring Pin	1
3	AHR-101-06-1	Jaw Case, Front	1	35	ψ3 × 6L	Spring Pin	2
4	AHR-101-07	Jaw	2	36	AHR-101-40	Trigger	1
5	AHR-101S-08A	Jaw Pusher Assy.	1	37	AHR-101-39	Trigger Rod	1
6	AHR-101-06-2	Jaw Case, Rear	1	38	AHR-101-42	Trigger Lever	1
7	AHR-101-09	Spring, Jaw Pusher	1	39	AHR-101S-06	Air Connecting Tube	1
8	AHR-101-10	Case Washer Ring	1	40	AHR-101S-07	C Ring	1
9	AHR-101-12	Lock Nut	1	41	AHR-101S-08	Air Inlet Connector	1
10	P12	O Ring	4	42	P9	O Ring	3
11	P12-BR	Backup Ring	2	43	AHR-101S-09	Universal Conneter	1
12	AHR-101-15	Frame	1	44	AHR-101-45	Valve	1
13	AHR-101-16	Piston Assy.	1	45	AHR-101-46	Spring, Valve	1
14	P22A	O Ring	1	46	P12	O Ring	1
15	P22A-BR	Backup Ring	1	47	AHR-101-52	Cap, Valve	1
16	AHR-101-19	Spring	1	48	AHR-101-28	Rubber Cushion	1
17	AHR-101-20	Hanging Clip	1	49	AHR-101-27	Lock Nut, Frame	1
18	AHR-101S-02	Adaptor	2	50	AHR-101-30-1	Stem, Air Piston	1
19	AHR-101S-03	Vacuum Tube Assy.	1	51	AHR-101-30-4	Plate, Large	1
20	P16	O Ring	1	52	AHR-101-30A	Piston Ring	1
21	S28	O Ring	1	53	AHR-101-30-2	Washer	1
22	AHR-101S-01	Frame Cap	1	54	AHR-101-30-5	Plate, Small	1
23	AS568-011	O Ring	1	55	AHR-101-30-3	Lock Nut, Piston	1
24	AHR-101S-04	Adjust Valve	1	56	AS568-147	O Ring	1
25	ψ3 × 22L	Spring Pin	1	57	AHR-101-33	Cap, Cylinder	1
26	P11-NBR	Rubber Grip	1	58	AHR-101-35	Spanner Gauge	1
27	P7	O Ring	1	59	AHR-101-36	Spanner	1
28	AHR-101-44	Pusher, Valve	1	60	AHR-101S-10	Safety Cap	1