


SA8222

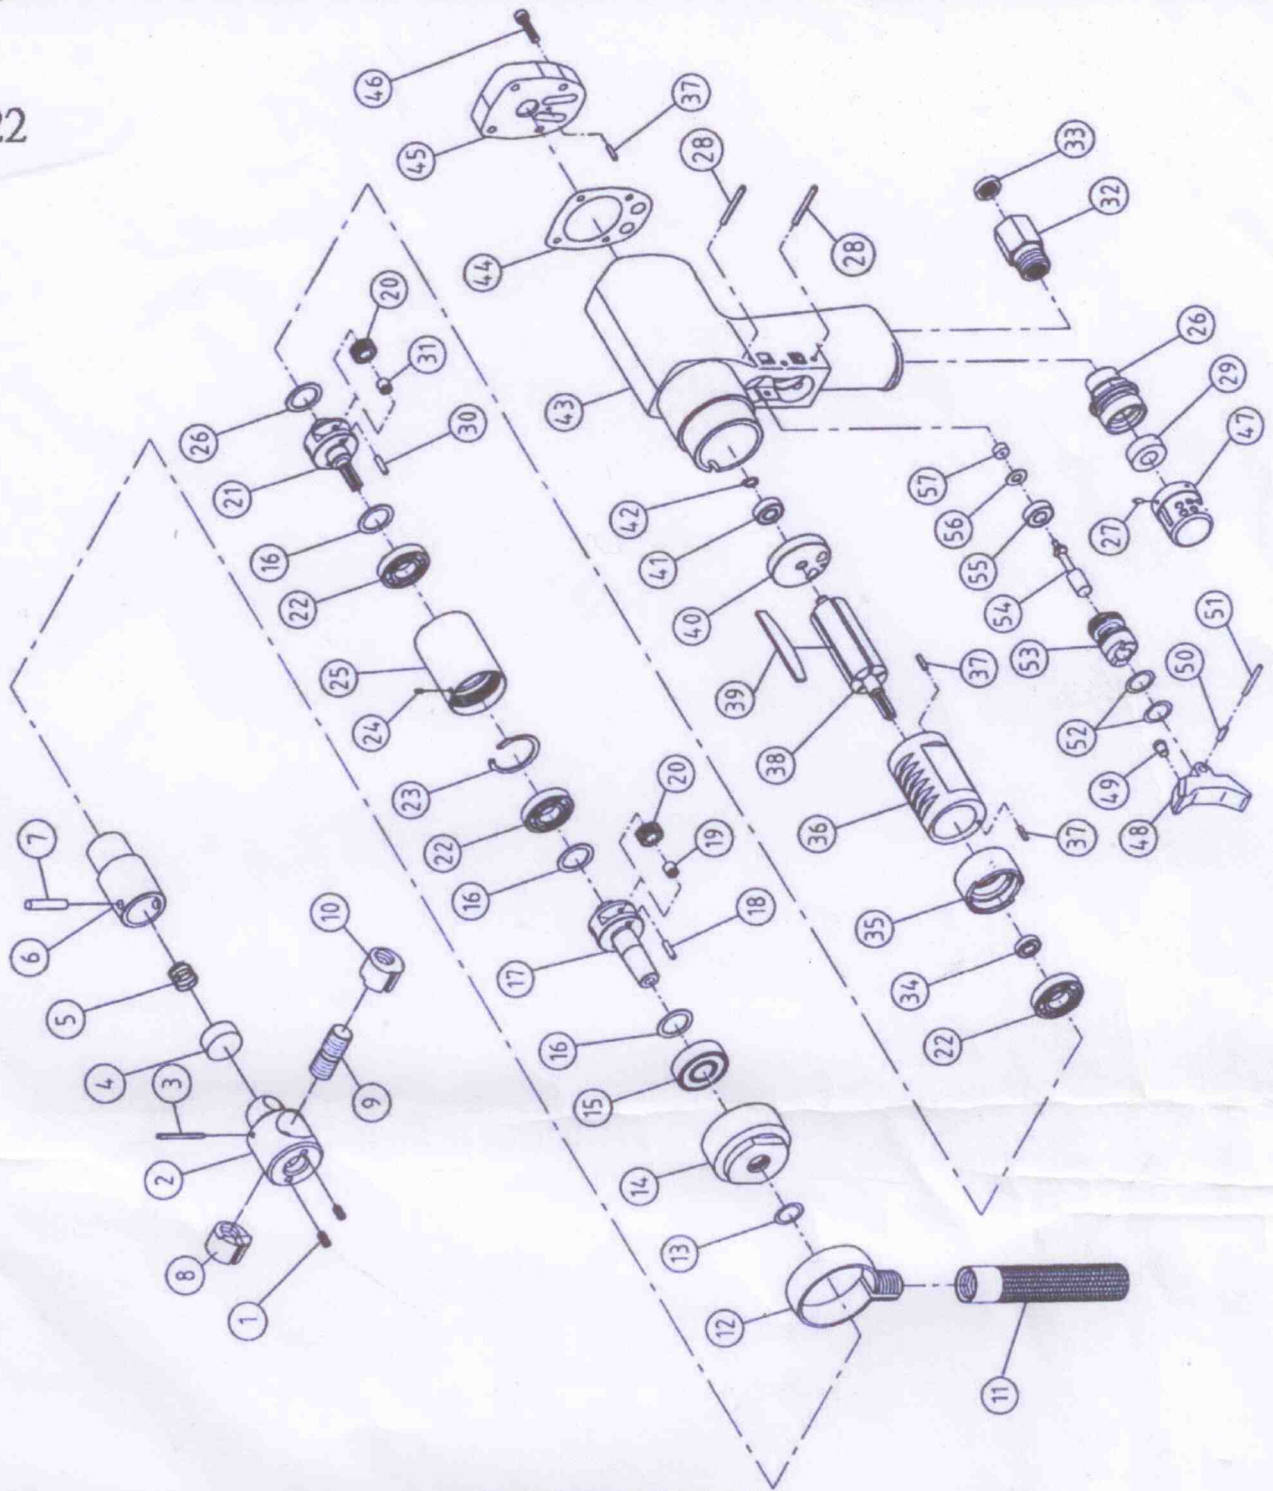

Parts list					
NO	Parts name	QTY	NO	Parts name	QTY
1	Stop screw	2	30	Pin	2
2	Coupling	1	31	Needle bearing	2
3	Hollow Pin	1	32	Connector	1
4	Top	1	33	Filter	1
5	Spring	1	34	Bearing	1
6	Body	1	35	Cylinder cap	1
7	Pin	1	36	Cylinder	1
8	Anchor Block	1	37	Cavity pin	3
9	Screw Blot	1	38	Cylinder Arbor	1
10	Anchor Block	1	39	Rotar blade	5
11	Fastener handle	1	40	Air inhalant cover	1
12	Fastener	1	41	Bearing	1
13	Oil seal	1	42	S-Ring	1
14	Front cap	1	43	Tool body	1
15	Bearing	1	44	Cylinder back cover spacer	1
16	Washer	4	45	Cylinder back cover	1
17	Planetary gear seat	1	46	Screw	4
18	Pin	2	47	Muffler cover	1
19	Needle bearing	2	48	Reverse button	1
20	Planetary gear	4	49	Pin	2
21	Planetary gear seat	1	50	Cavity pin	1
22	Bearing	3	51	Pin	1
23	C-Ring	1	52	Oil seal	4
24	Screw	1	53	Reverse valve	2
25	Inner gear	1	54	Reverse shaft	2
26	Muffler cover	1	55	Oil seal	2
27	Screw	1	56	Oil seal	2
28	Cavity pin	2	57	Oil seal	2
29	Muffler	1	58		