


1/4" CAP. SCREW DRIVER - STRAIGHT TYPE-

EXPLODED VIEW SP-1800A

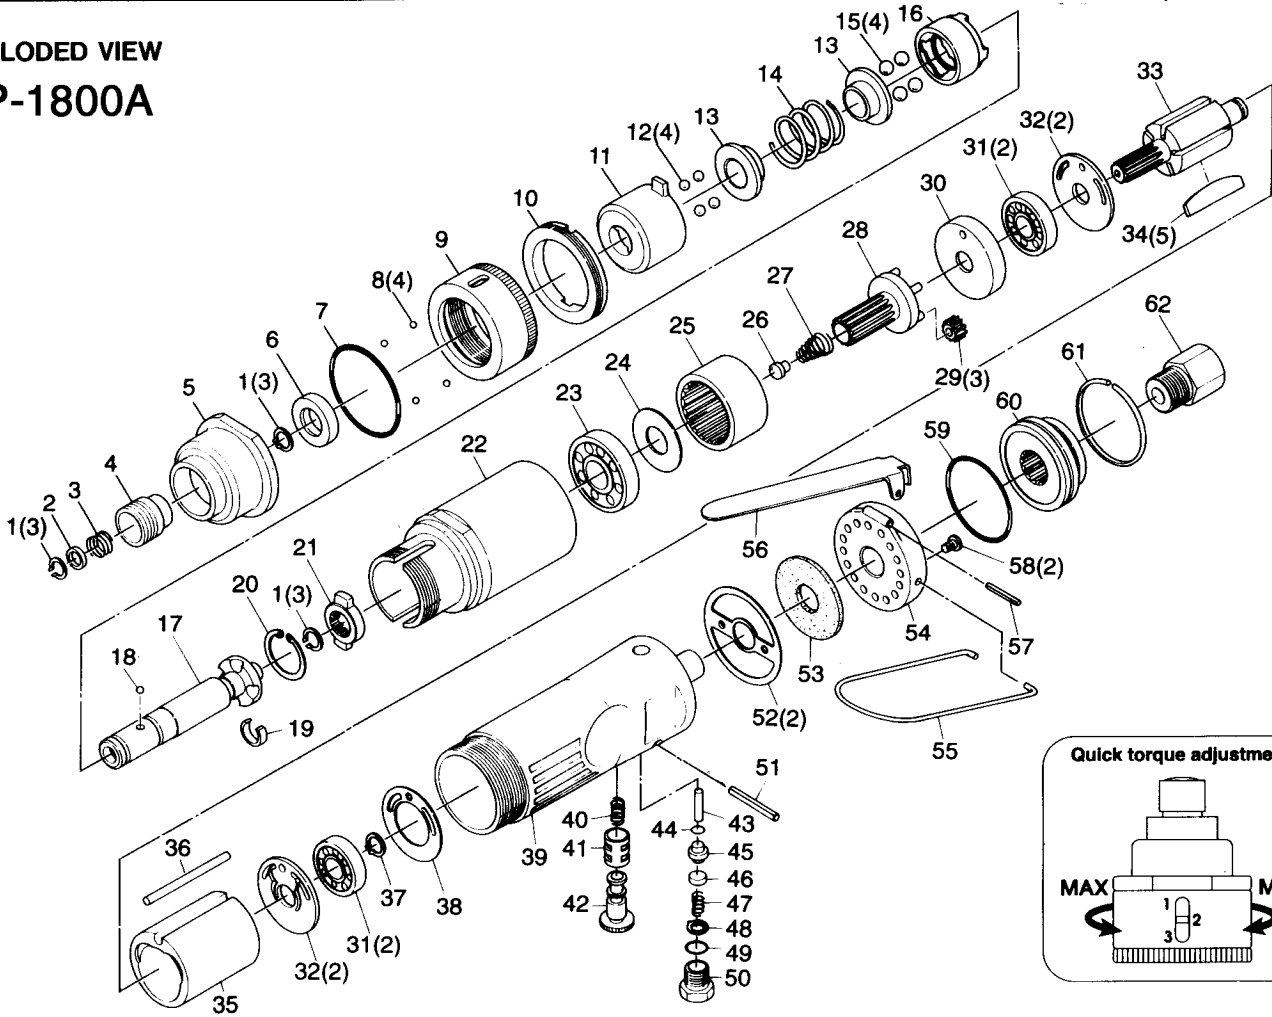

PARTS LIST

Index No.	Parts No.	Description	Qty. Per tool
1	800A01	Retainer Ring	3
2	800A02	Washer	1
3	800A03	Spring	1
4	800A04	Ball Retainer	1
5	800A05	Head Cap	1
6	800A06	Spacer	1
7	800A07	"O" Ring	1
8	800A08	Steel Ball	4
9	800A09	Adjust Ring	1
10	800A10	Adjust Nut	1
11	800A11	Adjust Cup	1
12	800A12	Steel Ball	4
13	800A13	Thrust Washer	2
14	800A14	Spring	1
15	800A15	Steel Ball	4
16	800A16	Clutch Joe	1
17	800A17	Work Spindle	1
18	800A18	Steel Ball	1
19	800A19	Wiper	1
20	800A20	Snap Ring	1
21	800A21	Dog	1
22	800A22	Lock Ring	1
23	800A23	Ball Bearing	1
24	800A24	Spacer	3
25	800A25	Internal Gear	1
26	800A26	Guide Pin	1
27	800A27	Spring	1
28	800A28	Spindle	1
29	800A29	Idle Gear W / Bush	3
30	800A30	Bearing Case	1
31	800A31	Ball Bearing	2
32	800A32	End Plate	2
33	800A33	Rotor	1

Index No.	Parts No.	Description	Qty. Per tool
34	800A34	Rotor Blade	5
35	800A35	Cylinder	1
36	800A36	Cylinder Pin	1
37	800A37	Retainer Ring	1
38	800A38	Motor Gasket	1
39	800A39	Motor Housing	1
40	800A40	Reverse Spring	1
41	800A41	Reverse Valve Bush	1
42	800A42	Reverse Button	1
43	800A43	Valve Pin	1
44	800A44	"O" Ring	1
45	800A45	Valve Stem	1
46	800A46	"O" Ring Retainer	1
47	800A47	Valve Spring	1
48	800A48	Reverse Retainer	1
49	800A49	"O" Ring	1
50	800A50	Valve Screw	1
51	800A51	Roll Pin	1
52	800A52	Housing Gasket	1
53	800A53	Muffler	1
54	800A54	Housing Cap	1
55	800A55	Hanger	1
56	800A56	Throttle Lever	1
57	800A57	Roll Pin	1
58	800A58	Screw	2
59	800A59	"O" Ring	1
60	800A60	Deflector	1
61	800A61	Deflector Stop Ring	1
62	800A62	Air Inlet	1