
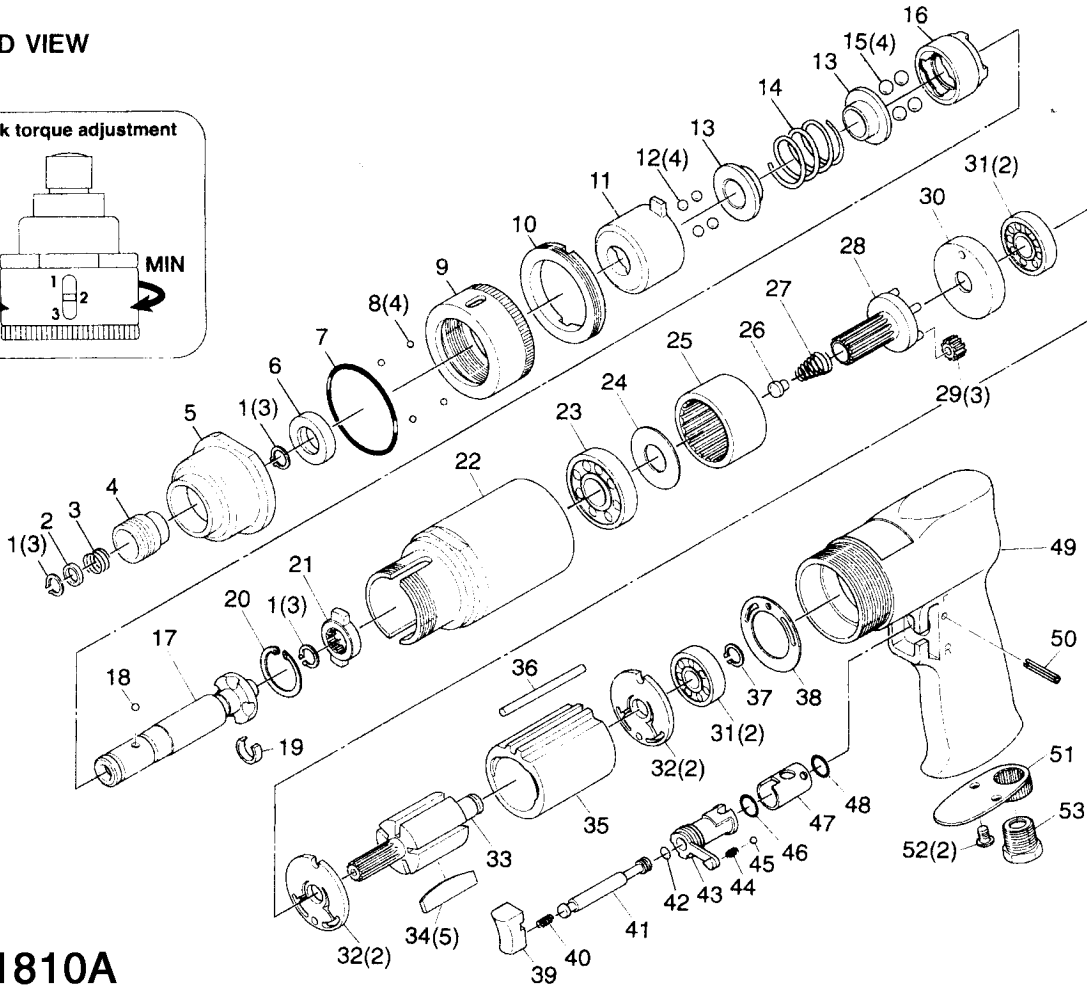


1/4" CAP. SCREW DRIVER -PISTOL TYPE-

EXPLODED VIEW

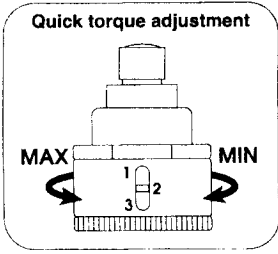

SP-1810A

PARTS LIST

Index No.	Parts No.	Description	Qty. Per tool
1	810A01	Retainer Ring	3
2	810A02	Washer	1
3	810A03	Spring	1
4	810A04	Ball Retainer	1
5	810A05	Head Cap	1
6	810A06	Spacer	1
7	810A07	"O" Ring	1
8	810A08	Steel Ball	4
9	810A09	Adjust Ring	1
10	810A10	Adjust Nut	1
11	810A11	Adjust Cup	1
12	810A12	Steel Ball	4
13	810A13	Thrust Washer	2
14	810A14	Spring	1
15	810A15	Steel Ball	4
16	810A16	Clutch Joe	1
17	810A17	Work Spindle	1
18	810A18	Steel Ball	1
19	810A19	Wiper	1
20	810A20	Snap Ring	1
21	810A21	Dog	1
22	810A22	Lock Ring	1
23	810A23	Ball Bearing	1
24	810A24	Spacer	1
25	810A25	Internal Gear	1
26	810A26	Guide Pin	1
27	810A27	Spring	1
28	810A28	Spindle	1
29	810A29	Idle Gear W / Bush	3
30	810A30	Bearing Case	1
31	810A31	Ball Bearing	2
32	810A32	End Plate	2
33	810A33	Rotor	1

Index No.	Parts No.	Description	Qty. Per tool
34	810A34	Rotor Blade	5
35	810A35	Cylinder	1
36	810A36	Cylinder Pin	1
37	810A37	Retainer Ring	1
38	810A38	Motor Gasket	1
39	810A39	Trigger	1
40	810A40	Spring	1
41	810A41	Valve Stem	1
42	810A42	"O" Ring	1
43	810A43	Reverse Lever	1
44	810A44	Spring	1
45	810A45	Steel Ball	1
46	810A46	"O" Ring	1
47	810A47	Reverse Bushing	1
48	810A48	"O" Ring	1
49	801A49	Motor Housing	1
50	810A50	Roll Pin	1
51	810A51	Exhaust Diffuser	1
52	810A52	Screw	2
53	810A53	Air Inlet	1